

Twister Switch

Information Guide

- Twister on bended tube, long cable
(P005-50 black, P005-51 red, P005-52 yellow, P005-53 blue, P005-54 green)
- Twister on bended tube, short cable
(P005-60 black, P005-61 red, P005-62 yellow, P005-63 blue, P005-64 green)
- Twister Basic, long cable
(P005-70 black, P005-71 red, P005-72 yellow, P005-73 blue, P005-74 green)
- Satellite Twister
(P005-40 black, P005-41 red, P005-42 yellow, P005-43 blue, P005-44 green)



About the Twister

The Twister is a durable and reliable single switch that requires only the slightest touch on its 17 mm (0,65 in) surface for activation and is available in 5 colors. Twister uses the standard 3,5 mm mono jack. Simply plug Twister into the 3,5 mm female jack on a switch-adapted device, joystick or computer. (for computer you need a switch interface)

Operating the Twister

The Twister switch is a single mechanical normal open switch. This means it will activate when pressed down.

To activate your Twister, simply press anywhere on the top of the activation surface. You will feel and hear a clear and audible "click".

Cleaning and maintenance

To keep Twister functioning properly

- Disconnect Twister and wipe clean with a cloth slightly dampened with water and a detergent or alcohol.
- Never immerse Twister in water or cleaning solution.
- Do not pull or wrap the cable around Twister
- Do not attempt to open or disassemble the Twister enclosure.

Warranty & Customer Support Info

Your Twister switch includes a two-year limited warranty from mo-Vis. The warranty begins on the date of purchase and protects you against defects in materials and workmanship.

For support and to learn more about other products from mo-Vis, contact:

mo-Vis bvba
Biebuyckstraat 15 D
9850 Nevele
+32 9 335 28 60
info@mo-vis.com
www.mo-vis.com



Installation



Mind to not damage any cable while installing Twister.

When in use, regularly check cables.

Twister on bended tube

The Twister is attached to a mo-Vis Quick-to-mount bended tube of 10 cm (3,94 in) and 6 mm (0,236 in) diameter.



Twister on bended tube can be mounted using the Quick-to-mount clamps to attach to other rods or wheelchair.

Twister Basic

The Twister is mounted on a plate of metal/plastic with 2 screws.



Twister Basic can be mounted in a tray.

Satellite Twister



The Twister is equipped with an insert to mount on the All-round Joystick.

Technical specifications

Twister Button technical specifications:

- Switch type: mechanical Normal Open
- Connection type: wired
- Activation type: pressure
- Activation surface diameter: 1,7 cm (0,65 in)
- Activating force: 30 g (1.06 oz.)
- Travel before activation: 0,5 mm (0,02-in)
- Feedback: auditory click, tactile
- Plug size: 3,5 mm (1/8 in) mono jack
- Cable length: short cable 30 cm (11,81 in) or long cable 150 cm (70,86 in)
- Mounting type bended tube: Diameter 6 mm (0,236 in) Length 10 cm (3,94 in)
- Mounting type basic: mounted on a sheet of metal/plastic with 2 screws Hole diameter 2,5 mm (0,098 in) Distance 8 mm (0,315 in)
- 2 Types of screws delivered:
 - Diameter 2,2 mm (0,087 in) Length 6,5 mm (0,266 in) for sheet thickness 0,5 mm (0,02 in) to 2 mm (0,079 in)
 - Diameter 2,2 mm (0,087 in) Length 9,5 mm (0,374 in) for sheet thickness 3 mm (0,118 in) to 4,5 mm (0,177 in)

Manual item: D-P005-50-70-00



mo-Vis bvba
Biebuyckstraat 15 D 9850 Nevele BELGIUM
+32 9 335 28 60 info@mo-vis.com - www.mo-vis.com